

Work Order ID 75380

\*75380\*

Page 1

October 21-11:27:48 AM

Item ID: D206-642-151

Accept

\*N900040100\*

Setup Start \*NS1\*

Revision ID:

Stop \*NS2\*

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

\*1\*

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

\*1\*

Customer:

Reference:

Approvals:

Process Plan: M.L.J

Date: 11/10/21 Tooling:

Date:

QC:

Date:

SPC (Y/N):

Date:

Run Start \*NR1\*

Stop \*NR2\*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D3804	A								
IIN-D206-642	O								

100

0.00

\*100\*

DOCUMENT CONTROL

DC

Memo

0.00

Document Control

Photocopy bluefile & type labels per PPP D206-642-151 CHG001

NA

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng' / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75380

**\*75380\***

Page 2

October-21-11 11:27:48 AM

Item ID: D206-642-151

Accept

**\*N900040100\***

Setup Start **\*NS1\***

Revision ID:

Item Name: Replacement Skidtube

Stop **\*NS2\***

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
110		0.00							
<b>*110*</b>	Skidtubes								
Skidtubes	<b>Memo</b>	0.00							
Skidtubes	1-Deburr Fwd edge of tube								
	2- Remove ridge on inside of Fwd edge of tube as per Dwg D3804								
	3-Weld Fwd Cap as per Dwg D3804. Use aluminum rod. Grind D2647 to fit as required.								
	Pick:								
	Qty Part Number DescriptionBatch								
	A/R Aluminum Rod <u>M117884/M118735</u>								
	4-Grind weld flush to cap on top surface only.								
	5-Cut Aft end as per dwg D3804 from front of tube and Deburr								
	6-Remove inner indexing ridge on Aft end of skidtube as per Dwg D3804								
	7-Open holes for Aft end cap as per Dwg D3804 with #30 Drill Bit using DT8025.								
	8-Drill pilot holes using Dt8166 & DT8169D & DT9771.								
	9-Locate DT8732 from inner Aft saddle hole & 3rd crossbolt hole. Insert D3286-1 doubler using DT8732 & D206-642-241-T1, then locating doubler off of 3/16" holes, cleco DT8732 & doubler leaving DT8732 for added support.								
	10- Drill D3286-1 doubler rivet holes in tube using # 30 drill, spot drilling doubler at the same time.								

SAD 11-11-15

7BE-11-11-15

SAD 11-11-17

SAD 11-11-12

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 75380****\*75380\***

Page 3

October-21-11 11:27:48 AM

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

11-Working from the center out, drill # 30-holes into D3286-1 doubler. Cleco each hole as it is being drilled. Verify angle of holes to accommodate rivet heads.

12-Remove 3/16" cleco's only and open GHW holes to Ø0.500" as per Dwg D3804

13-Remove D3286-1 doublers, identify orientation, deburr, then attach them to the workorder

14-Remove indexing edge using DT8741 as per Dwg D3804

15-C'sink GHW rivet holes as per Dwg D3804

16- Open Aft cap hole #6.

\*\*\*\*no wearplate holes for this skidtube\*\*\*\*

17-Deburr tube and blow out chips from inside the tube

120

QC6- Inspect dimensions to drawing

0.00

**\*120\***

QC

Memo

0.00

Quality Control

SAD 11/11/17 @

DL 11/11/21

S u l u / 21

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 75380**

October-21-11 11:27:48 AM

**\*75380\***

Page 4

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***QC:   1   Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
140	Chemical Conversion Coat per QSI005 4.1	0.00							
<b>*140*</b>									
HandFinish	Memo	0.00	DL	11/11/21					
Hand Finishing									
150	QC3- Inspect Part Finish	0.00							
<b>*150*</b>			SAP	11/11/21					
QC	Memo	0.00							
Quality Control									
160		0.00							
<b>*160*</b>	Skidtubes								
Skidtubes	Memo	0.00							
Skidtubes	1-Open holes to finished size as per Dwg D3804, (without cutting fluid)								
	2-C'sink crossbolt spacer holes as per Dwg D3804(without cutting fluid)								
	3-Deburr and blow out all chips from inside the tube								

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



# Work Order ID 75380

**\*75380\***

Page 5

October-21-11 11:27:48 AM

Item ID: D206-642-151

Accept

**\*N900040100\***

Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

170

QC6- Inspect dimensions to drawing

0.00

**\*170\***

QC

Memo

0.00

Quality Control

1 8 DEU-11-21

180

Skidtubes

0.00

**\*180\***

Skidtubes

Memo

0.00

Skidtubes

1-Locate, install and rivet doublers as per Dwg D3804. Micro-shave rivets as required

*DC 11/11/21*

2-Bond D2654-1 web in place as per QSI 015. Ensure holes line up. Allow 12

Hrs. cure time before cutting

Start Date: 11/11/21 Time: 4:25

Finish Date: 11-11-24 Time: 1:30

Pick:

Qty Part Number Description Batch

A/RSikaflex-291 119399

Sikaflex expire date: 12/08/13

*DC 11/11/21*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 75380****\*75380\***

Page 6

October-21-11 11:27:48 AM

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

190

QC5- Inspect part completeness to step on W/O

0.00

**\*190\***

QC

Memo

0.00

Quality Control

1 0 BE11-11-24

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 75380****\*75380\***

Page 7

October-21-11 11:27:48 AM

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

200

0.00

**\*200\***

Skidtubes

Skidtubes

Memo

0.00

Skidtubes

1-remove alodine from around hole and prepare for welding

2-Prep per QSI 005 and Insert D2649 crossbolt spacers. Weld as per QSI 004 and Dwg D3804. Remember to back drill each hole to 0.25" before welding the other side. Use aluminum rod.

Pick:

QtyPart NumberDescriptionBatch  
A/RAluminum Rod M117889

3-Grind welds flush as per Dwg D3804.

4-Using DT8733, insert (2) D3286-3 spacers as per QSI 004 and Dwg D3804. Remember to back drill each hole to Ø0.402" before welding other side. Use SS rod as required.

A/RSS Rod NONE BE11-11-30

5-Counterbore 5/16" x 0.750" deep except 7th hole from Aft end as per Dwg D3804. Deburr

BE11-11-24BE11/11/2811-11-30

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

October-21-11 11:27:48 AM

**Item ID:** D206-642-151

**Accept**

**\*N900040100\***

Setup Start \*NS1\*

**Revision ID:**

**Item Name:** Replacement Skidtube

Stop \*NS2\*

**Start Date:** 21/10/2011 **Start Qty:** 1.00

**\* 1 \***

**Cust Item ID:**

**Required Date:** 02/11/2011      **Req'd Qty:** 1.00

**\* 1 \***

**Customer:**

**Reference:**

**Approvals:**      **Process Plan:** \_\_\_\_\_ **Date:** \_\_\_\_\_ **Tooling:** \_\_\_\_\_ **Date:** \_\_\_\_\_

Run Start \*NR1\*

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

210

0.00

**\*210\***

## HandFinishing

0.00

HandFinish

## Memo

## Hand Finishing

Install D2680-041 Nut Plate as per Dwg D3804

215

QC9- Inspect visual per QSI004- Fusion Welds

0.00

**\*215\***

QC

## Memo

0.00

## Quality Control

220

QC10- Inspect visual per QSI004- ground welds

0.00

\*220\*

OC

## Memo

0.00

## Quality Control

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



# Work Order ID 75380

**\*75380\***

Page 9

October-21-11 11:27:48 AM

Item ID: D206-642-151

Accept

**\*N900040100\***

Setup Start **\*NS1\***

Revision ID:

Item Name: Replacement Skidtube

Stop **\*NS2\***

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
230	QC5- Inspect part completeness to step on W/O	0.00							
<b>*230*</b>									
QC	Memo	0.00							
Quality Control									
240	Pressure Wash per QSI005 4.3	0.00							
<b>*240*</b>									
HandFinish	Memo	0.00							
Hand Finishing									
250	White Gloss(Ref:4.3.5.1) per QSI005 4.3-Alum	0.00							
<b>*250*</b>									
Powdercoat	Memo	0.00							
Powder Coating									

*IXM 11/12/02*

*IXM 11/12/05*

Memo

START TIME:

OVEN TEMPERATURE:

FINISH TIME:

8-30  
320 OF  
9:00

*W118434*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

**Work Order ID 75380****\*75380\***

Page 10

October-21-11 11:27:48 AM

Item ID: D206-642-151

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Replacement Skidtube

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
260	QC3- Inspect Part Finish	0.00							
<b>*260*</b>									
QC	Memo	0.00							
Quality Control									
270	HandFinishing	0.00							
<b>*270*</b>									
HandFinish	Memo	0.00							
Hand Finishing	✓ Install D2651-3 O-Rings on D2651-1 plugs with Petroleum Jelly and install plugs as per Dwg D3804. Clean excess adhesive.								

LH

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75380

**\*75380\***

Page 11

October-21-11 11:27:48 AM

Item ID: D206-642-151

Accept

**\*N900040100\***

Setup Start **\*NS1\***

Revision ID:

Item Name: Replacement Skidtube

Stop **\*NS2\***

Start Date: 21/10/2011 Start Qty: 1.00

**\*1\***

Cust Item ID:

Required Date: 02/11/2011 Req'd Qty: 1.00

**\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
280		0.00							
*280*	HandFinishing					16H	0	11121	
HandFinish	Memo	0.00							
Hand Finishing	1-Install D2646 Aft Cap and seal with Sikaflex. Clean excess adhesive A/RSikaflex-291 11119443 Sikaflex expire date: 12/07								
	2- Install wearplate as per dwg								
	2-Wing Walk as per Dwg D3804 and QSI 005 4.4 Batch: 11118988								
290	QC3- Inspect Part Finish	0.00							
*290*									
QC	Memo	0.00							
Quality Control									

16H φ 11 11/12/12

8 11/12/13

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Work Order ID 75380

**\*75380\***

Page 12

October-21-11 11:27:48 AM

Item ID: D206-642-151 Accept **\*N900040100\*** Setup Start **\*NS1\***  
 Revision ID: Stop **\*NS2\***  
 Item Name: Replacement Skidtube  
 Start Date: 21/10/2011 Start Qty: 1.00 **\*1\*** Cust Item ID:  
 Required Date: 02/11/2011 Req'd Qty: 1.00 **\*1\*** Customer:  
 Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_ Run Start **\*NR1\***  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_ Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
300 <b>*300*</b> QC Quality Control	QC5- Inspect part completeness to step on W/O  Memo	0.00 0.00							
310 <b>*310*</b> Packaging Packaging	Packaging  Memo Identify and pack for shipping as per PPP D206-642-151 Location: PPP Rev: <u>PPR 75701</u>	0.00 0.00							
320 <b>*320*</b> QC Quality Control	QC21- Final Inspection - Work Order Release  Memo	0.00 0.00							

*11/12/13*

*11/12/14*

*MF 11-12-14*

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



# Picklist Print

October-21-11 11:27:54 AM

Page 1

Work Order ID: 75380

**\*75380\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A 10.12.08 PER IIN REV.N DD VERF:EC IPP  
REV:B 11.09.16 PER IIN REV.O DD VERF:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D2620		Manufactured	No			110	Each	13.0000	1	1			
-------	--	--------------	----	--	--	-----	------	---------	---	---	--	--	--

**\*D2620\***

Skidtube, 206 Skidtube

\*\*

SAD 11-11-15

Location

Loc Qty

Loc Code

LG

13

B75472

71616

3

7

71617

6

73783

1

73785

1

73786

2

D2647

Manufactured No

110

Each

199.0000

1

1

**\*D2647\***

Cap

\*\*

BBU-11-15

Location

Loc Qty

Loc Code

LG002

199

55352

4

71171

11

73826

184

1

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:27:54 AM

Work Order ID: 75380

**\*75380\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

CR3212-4-04

Purchased

No

180

Each

18,966.00

52

52

**\*CR3212-4-04\***

Cherry Rivet

\*\*

Location

Loc Qty

Loc Code

ST311

150

116471

78

117816

3

118686

1

118840

68

st510

10000

119075

10000

ST516

8816

119017

8816

D2654-1

Manufactured

No

180

Each

4.0000

1

1

**\*D2654-1\***

Web

\*\*

Location

Loc Qty

Loc Code

LG

4

73794

4

D3286-1

Manufactured

No

180

Each

110.0000

2

2

**\*D3286-1\***

Doubler

\*\*

Location

Loc Qty

Loc Code

LG002

110

74111

22

74441

88

374872

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:27:54 AM

Page 3

Work Order ID: 75380

**\*75380\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

D2649

Manufactured No

200

Each

1,184.000

19

19

**\*D2649\***

Cross Bolt Spacer

**\*\***

BE 11-11-24  
B73858 \*19

Location

Loc Qty

Loc Code

LG

617

68224

2

71355

2

72704

2

72841

11

73855

600

LG001

567

65317

1

68507

11

73390

8

73857

21

73860

526

D3286-3

Manufactured No

200

Each

101.0000

2

2

**\*D3286-3\***

Spacer

**\*\***

BE 11-11-28  
B74870 \*2

Location

Loc Qty

Loc Code

LG001

101

74117

21

74439

80

D2680-041

Manufactured No

210

Each

99.0000

1

1

**\*D2680-041\***

Nut Plate

**\*\***

BE 11-11-30  
B73854 \*1

Location

Loc Qty

Loc Code

LG

4

73334

4

ST020

95

73854

95

October-21-11 11:27:54 AM

Shop Packet Print

Page 3

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:27:54 AM

Work Order ID: 75380

**\*75380\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

CR3212-4-03

Purchased

No

210

Each

2,010.000

2

2

**\*CR3212-4-03\***

Cherry Rivet

\*\*

11/11/30

## Location

## Loc Qty

## Loc Code

FP-B

2

110139

2

ST311

1008

114859

1008

ST318

1000

119017

1000

AN960JD416

NAS1149D0463J

Purchased

No

210

Each

0.0000

1

1

**\*AN960JD416\***

Washer

\*\*

(x1) 11/12/12 11/18385

CCR264SS3-3

Purchased

No

210

Each

1,285.000

2

2

**\*CCR264SS3-3\***

Cherry Rivet

\*\*

11/11/30

## Location

## Loc Qty

## Loc Code

FP-B

2

113973

2

ST311

283

117849

283

ST317

1000

119017

1000

MS27039-4-06

Purchased

No

210

Each

433.0000

1

1

**\*MS27039-4-06\***

Screw

\*\*

11/12/12

## Location

## Loc Qty

## Loc Code

ST292

433

119075

400

119124

33

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



# Picklist Print

October-21-11 11:27:54 AM

Work Order ID: 75380

**\*75380\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

D2651-1 Manufactured No

270 Each 1,063.000 6 6

**\*D2651-1\***

Plug

\*\*

11/12/12

Location	Loc Qty	Loc Code
fpa	2	
69018	2	
FP-A	1061	
57869	1	
66445	10	
70839	2	
71037	31	
73827	1017	

D2651-3 Manufactured No

270 Each 1,547.000 6 6

**\*D2651-3\***

O-Ring

\*\*

1373489 Cx6 11/12/12

Location	Loc Qty	Loc Code
FP-A	1547	
61962	12	
66956	30	
73489	505	
73828	1000	

D3873-1 Manufactured No

280 Each 342.0000 14 14

**\*D3873-1\***

Bushing

\*\*

1373832 Cx14 11/12/12

Location	Loc Qty	Loc Code
ST088	342	
64760	1	
68247	4	
73829	19	
73831	318	

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:27:54 AM

Work Order ID: 75380

**\*75380\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

D2646

Manufactured No

280

Each

91.0000

1

1

**\*D2646\***

Aft Cap

\*\*

B73825(x1) Jd 11/12/12

Location

Loc Qty

Loc Code

FP002

60

73294

60

FP004

17

68280

17

FP006

5

62678

5

FP-4

5

70945

1

71070

4

fp5

4

71038

4

D3805-041

Manufactured No

280

Each

0.0000

1

1

**\*D3805-041\***

Wearplate Assembly Fwd, Low Gear

MS27039-1-08

Purchased No

280

Each

1,971.000

2

2

**\*MS27039-1-08\***

Screw

\*\*

B76362(x1) Jd 11/12/12

\*\*

Jd 11/12/12

Location

Loc Qty

Loc Code

ST291

1971

117423

155

118378

316

118910

500

119075

500

119109

500

x2

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

Page 7

October-21-11 11:27:54 AM

Work Order ID: 75380

**\*75380\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

MS21042L3

Purchased

No

280

Each

9,976.000

7

7

**\*MS21042L3\***

Nut

\*\*

*u u/12/12*

Location

Loc Qty

Loc Code

ST300

976

117441

16

117885

87

118451

179

118927

694

ST516

6000

119017

6000

ST518

3000

119075

3000

*x7*

D3805-045

Manufactured

No

280

Each

5.0000

1

1

**\*D3805-045\***

Wearplate Assembly Aft, Low Gear

\*\*

*B.75494 (x1) u u/12/12*

Location

Loc Qty

Loc Code

FP

5

73817

5

AN960JD10L

NAS1149D0332J, Purchased

No

280

Each

0.0000

2

2

**\*AN960JD10L\***

Washer

\*\*

*(x2) u u/12/12 : 1111038*

October-21-11 11:27:54 AM

Shop Packet Print

Page 7

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries

# Picklist Print

October-21-11 11:27:54 AM

Page 8

Work Order ID: 75380

**\*75380\***

Parent Item: D206-642-151

**\*D206-642-151\***

Parent Item Name: Replacement Skidtube

Start Date: 21/10/2011

Required Date: 02/11/2011

Start Qty: 1.00

Required Qty: 1.00

AN3-37A Purchased No

280 Each 2,319.000 7 7

**\*AN3-37A\***

\*\*

Bolt

Location

Loc Qty

Loc Code

ST353

269

111668

169

118628

100

ST354

50

117619

50

ST518

2000

119086

2000

NAS1149D0363J Purchased No

280 Each 2,836.000 7 7

**\*NAS1149D0363.J\***

\*\*

Washer

Location

Loc Qty

Loc Code

ST298

2836

117601

218

118077

135

118612

483

118968

2000

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



ITEM	Qty -041	Qty -043	Part Number	Description
1	X		D3804-041	SKIDTUBE ASSEMBLY, 206 A/B LOW
2		X	D3804-043	SKIDTUBE ASSEMBLY, 206 A/B HIGH
5	1	1	D2600-1-160	EXTRUSION
6	1	1	D2646	AFT CAP
7	1	1	D2647	CAP
8	19	20	D2649	CROSS BOLT SPACER
9	6	8	D2651-1	PLUG
10	6	8	D2651-3	O-RING
11		1	D2654-3	WEB
12	1		D2654-1	WEB
13	1	1	D2680-041	NUT PLATE
14	2	2	D3286-1	DOUBLER
15	2	2	D3286-3	STUD
21	2	2	AN960JD10L	WASHER
22	1	1	AN960JD416	WASHER
23	2	2	CCR264SS3-3	RIVET
24	2	2	CR3212-4-03	RIVET
25	52	52	CR3212-4-04	RIVET
26	2	2	MS27039-1-08	SCREW
27	1	1	MS27039-4-06	SCREW

#### NOTES

- 1) MATERIAL: N/A
- 2) FINISH: -CHEMICAL CONVERSION COAT PER DART QSI 005 4.1  
-POWDER COAT WHITE (4.3.5.1) PER DART QSI 005 4.3
- 3) BLACK ANTI-SKID PAINT AS INDICATED TO 0.5 ABOVE LOCATION RIDGE PER DART QSI 005 4.4
- 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED
- 5) UNITS: INCHES UNLESS OTHERWISE NOTED
- 6) BREAK SHARP EDGES: 0.005 TO 0.010 MAX
- 7) IDENTIFICATION: NONE
- 8) WEIGHT: 12.5 lb
- 9) WELD PER DART QSI 004
- 10) BENDING: DAMAGE TOLERANCE ON FWD BEND:  
THERE SHOULD BE NO VISIBLE WRINKLES IN THE BEND FROM THE GROUND TO A HEIGHT OF 5 INCHES ABOVE THE GROUND. IT IS ACCEPTABLE TO POLISH OUT GOUGES UP TO 0.020 DEEP IN THE BENT PORTION OF THE TUBE. A MAXIMUM REDUCTION IN DIAMETER OF 0.150" IS ACCEPTABLE IN THE BENT PORTION OF THE TUBE.
- 11) BOND WEB INTO OUTER TUBE WITH SIKAFLEX-241/-291 ADHESIVE PER DART QSI 015
- 12) INSERT D2651-1 PLUG C/W D2651-3 O-RING IN HOLES MARKED 'P' (BOTH SIDES OF TUBE)

SHOP COPY  
RETURN TO  
ENGINEERING  
UNCONTROLLED COPY  
SUBJECT TO AMENDMENT  
WITHOUT NOTICE  
WORK ORDER  
NO. 75380 M.L.T

11/10/21

**RELEASED**  
UP 09.03.03  
per ECN 09-538

A	NEW ISSUE	MB	08.07.07
REV.	DESCRIPTION	BY	DATE
DESIGN	91		
DRAWN	91		
CHECKED	91		
MFG. APPR.	91		
APPROVED	91		
DE APPR.	91		
DATE	08.07.07		

<b>DART AEROSPACE USA, INC</b> PORT HADLOCK, WA	
DRAWING NO. D3804	REV. A SHEET 1 OF 5
TITLE SKIDTUBE ASSEMBLY, 206A/B	SCALE NTS
COPYRIGHT © 2006 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_


Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			


**NOTE:** Date & initial all entries

75380

RELEASED  
09.09.03

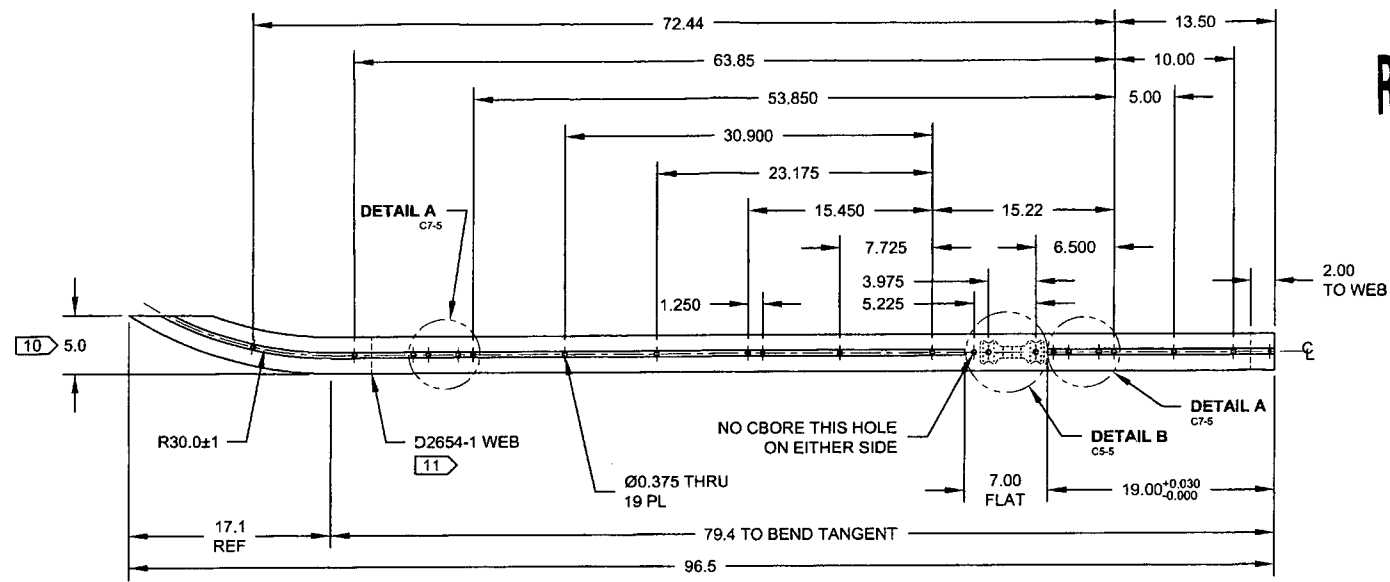

**D3804-041 BENDING/DRILLING DETAIL**

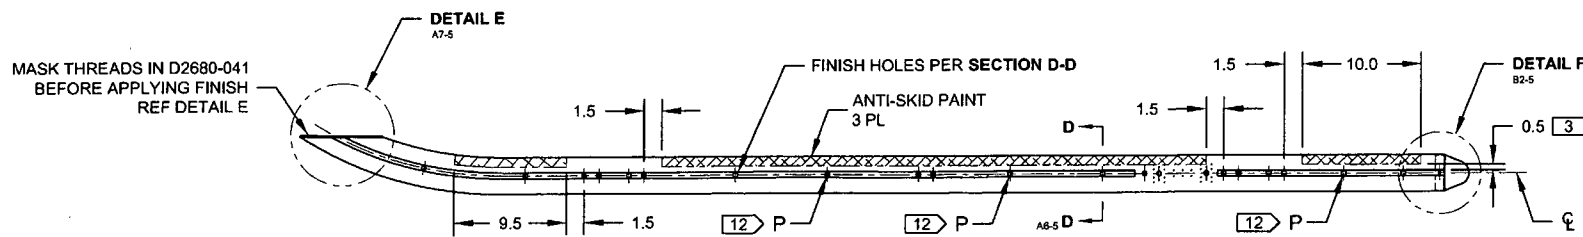

**D3804-041 ASSEMBLY/FINISHING DETAIL**

DESIGN	99	<b>DART AEROSPACE USA, INC</b>	
DRAWN	99	PORT HADLOCK, WA	
CHECKED	99	DRAWING NO.	REV. A
MFG. APPR.	99	D3804	SHEET 2 OF 5
APPROVED	99	TITLE	SCALE
DE APPR.	99	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	COPYRIGHT © 2005 BY DART AEROSPACE USA, INC	
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.			

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_


Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			


**NOTE:** Date & initial all entries

75380

RELEASED  
(U 09.03.03)

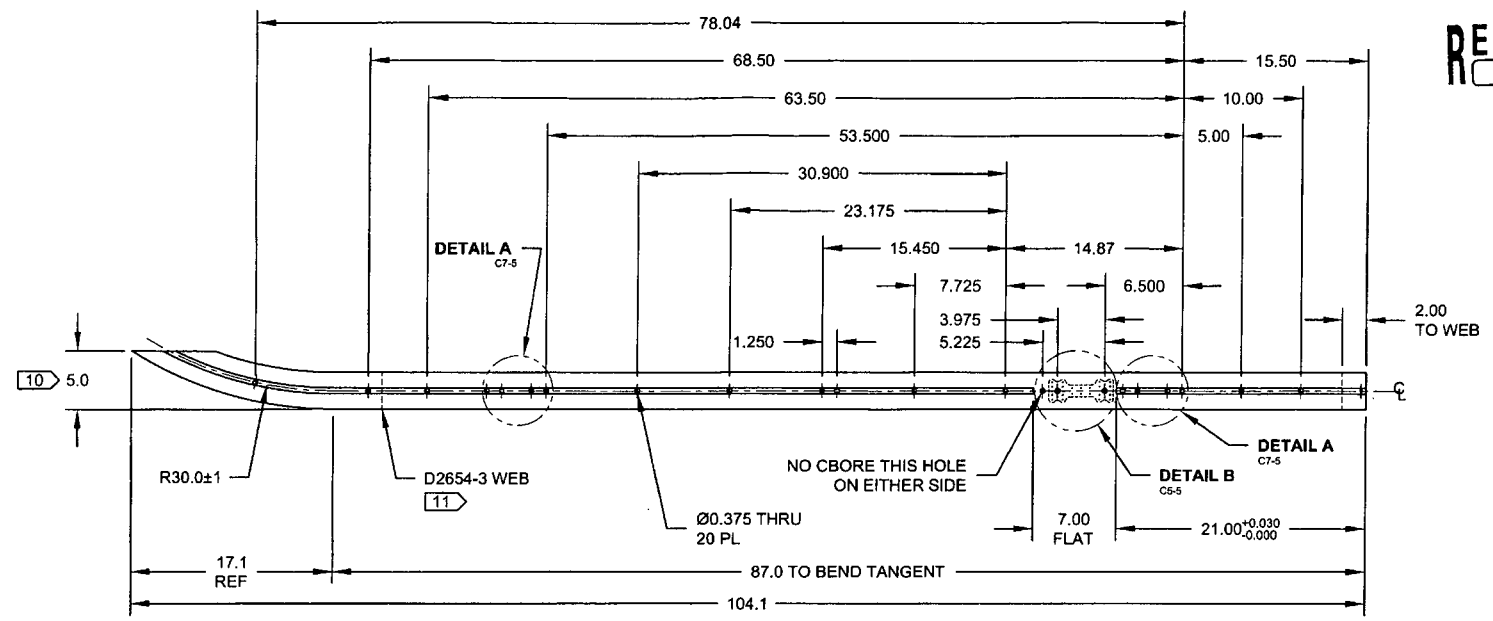

**D3804-043 BENDING/DRILLING DETAIL**

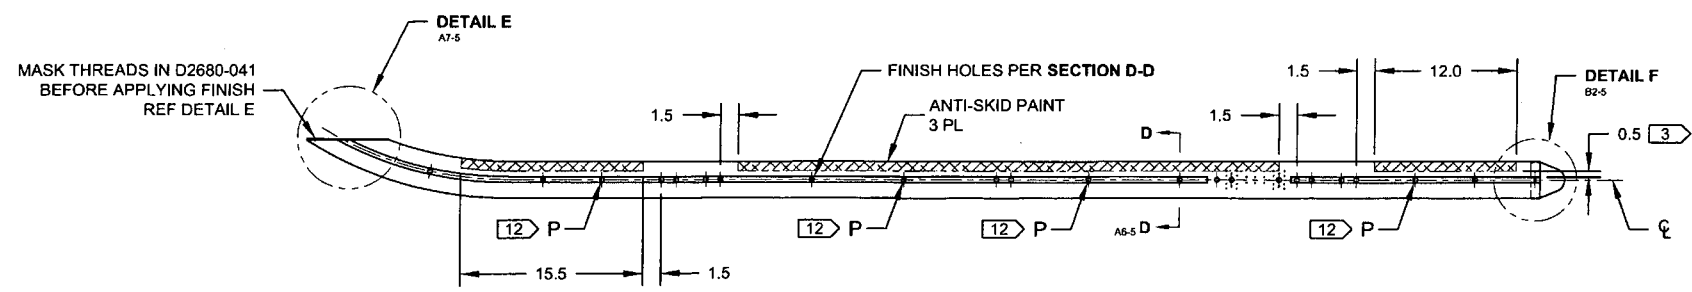

**D3804-043 ASSEMBLY/FINISHING DETAIL**

DESIGN	99	<b>DART AEROSPACE USA, INC</b>	
DRAWN	99	PORT HADLOCK, WA	
CHECKED	99	DRAWING NO.	REV. A
MFG. APPR.	99	D3804	SHEET 3 OF 5
APPROVED	99	TITLE	SCALE
DE APPR.	99	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	<small>COPYRIGHT © 2003 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_


Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			


**NOTE:** Date & initial all entries

75380


RELEASED  
CP 09.03.03

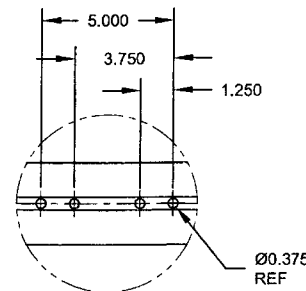

**DETAIL A**  
SCALE NONE  
D6-2  
C2-2  
D6-3  
C2-3

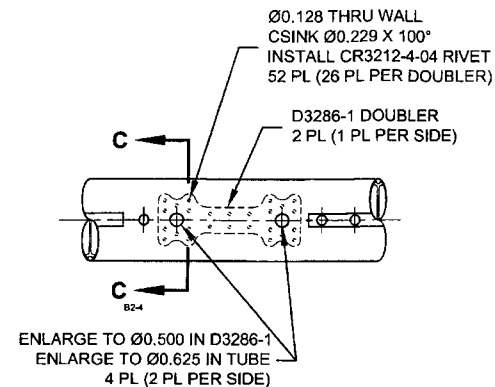


**DETAIL B**  
SCALE NONE  
C3-2  
C3-3

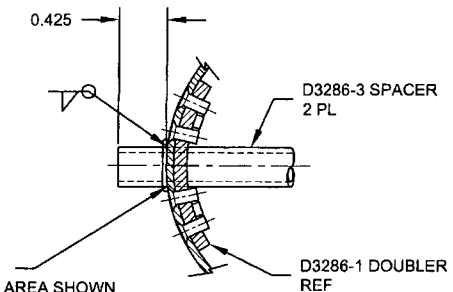

- TO INSTALL D3286-1/-3:
1. GRIND OFF FLANGE IN AREA SHOWN, FLUSH WITH OUTSIDE SURFACE OF ROUND TUBE
  2. LOCATE & DRILL D3286-1 DOUBLER USING DT3286-1T1
  3. ENLARGE HOLES IN D3286-1 TO Ø0.500
  4. ENLARGE HOLES IN TUBE TO Ø0.625 AND CHAMFER HOLE 0.03 X 45°
  5. RIVET D3286-1 TO TUBE
  6. INSERT D3286-3 SPACER
  7. WELD IN PLACE AND GRIND FLUSH

**SECTION C-C**  
PARTIAL SECTION  
SCALE NONE  
C6-4

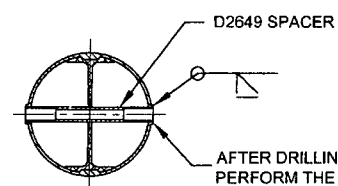

**SECTION D-D**  
FOR Ø0.375 HOLES ONLY  
SCALE NONE  
A4-2  
A4-3

- AFTER DRILLING AND BENDING ASSEMBLY PERFORM THE FOLLOWING FOR Ø0.375 HOLES ONLY:
1. CHAMFER HOLE 0.03 X 45°
  2. INSERT D2649 SPACER
  3. WELD INTO PLACE AND GRIND FLUSH
  4. CBORE TO Ø0.313 X 0.75 DP (EXCEPT WHERE INDICATED)

DESIGN	CP	<b>DART AEROSPACE USA, INC</b>	
DRAWN	JP	PORT HADLOCK, WA	
CHECKED	JP	DRAWING NO. D3804	REV. A
MFG. APPR.	JP	SHEET 4 OF 5	
APPROVED	JP	TITLE	SCALE
DE APPR.	JP	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	<small>COPYRIGHT © 2008 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS COVENANT THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

W/O:		WORK ORDER CHANGES						
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector	

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries



75380

RELEASED  
07.03.07

CCR264SS3-3  
RIVET  
2 PL

CR3212-4-03 RIVET  
2 PL

**VIEW G-G**  
SCALE NONE

A7-5

D2647 CAP, TO INSTALL:  
1. CUT TUBE LEVEL  
2. REMOVE RIDGE ON FWD SIDE  
3. LOCATE D2647 (TRIM AS REQD)  
4. WELD D2647 IN PLACE  
5. GRIND FLUSH  
6. RIVET D2680-041 NUT PLATE  
IN PLACE

MS27039-4-06 SCREW  
AN960JD416 WASHER  
D2680-041  
NUTPLATE

C7-5

1.0 REMOVE RIDGE ON  
INSIDE OF SKIDTUBE  
LEAVE 0.070 MIN.

**DETAIL E**  
SCALE NONE

B7-2  
B7-3

0.400

END OF WEB

SEAL WITH  
SIKAFLEX-241/291

D2646 AFT CAP

Ø0.204  
REF

MS27039-1-08 SCREW  
AN960JD10L WASHER  
2 PL

BORE OUT END  
OF SKIDTUBE  
TO 0.75 DEPTH  
AND 0.070 WALL

**DETAIL F**  
SCALE NONE

B2-2  
B2-3

DESIGN	91	<b>DART AEROSPACE USA, INC</b>	
DRAWN	91	PORT HADLOCK, WA	
CHECKED	91	DRAWING NO.	REV. A
MFG. APPR.	91	D3804	SHEET 5 OF 5
APPROVED	91	TITLE	SCALE
DE APPR.	91	SKIDTUBE ASSEMBLY, 206A/B	NTS
DATE	08.07.07	<small>COPYRIGHT © 2008 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

W/O:		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector

Part No: \_\_\_\_\_ PAR #: \_\_\_\_\_ Fault Category: \_\_\_\_\_ NCR: Yes No DQA: \_\_\_\_\_ Date: \_\_\_\_\_

Resolution: \_\_\_\_\_ Disposition: \_\_\_\_\_ QA: N/C Closed: \_\_\_\_\_ Date: \_\_\_\_\_

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

**NOTE:** Date & initial all entries